


Washing Machine Instructions

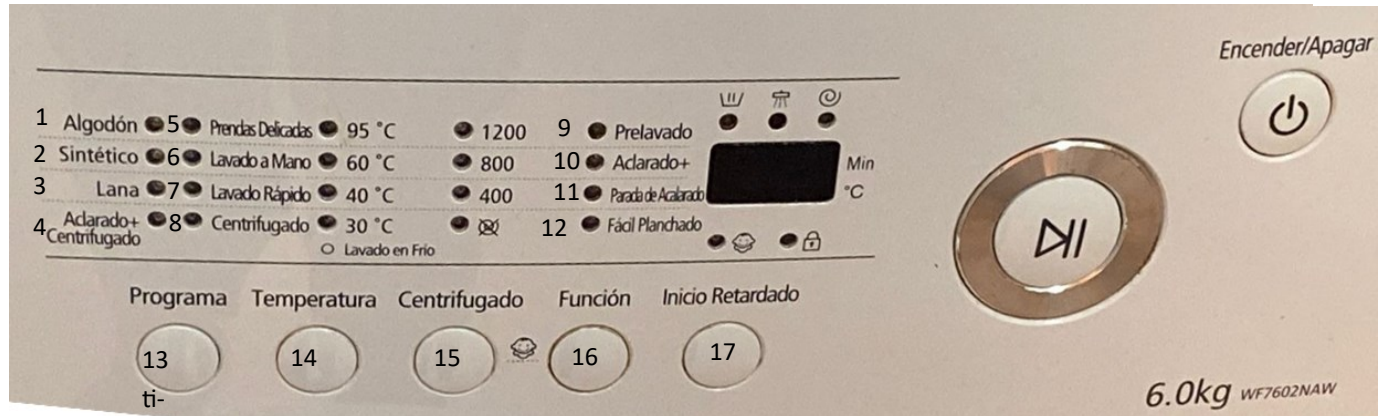

- | | | |
|---------------------|-----------------|-------------------|
| 1. Cotton | 9. Pre Clean | 17. Delayed Start |
| 2. Synthetic | 10. Rinse | |
| 3. Wool | 11. Rinse Stop | |
| 4. Spin Rinse | 12. Easy Iron | |
| 5. Delicate Clothes | 13. Program | |
| 6. Hand Wash | 14. Temperature | |
| 7. Rapid Clean | 15. Spin | |
| 8. Spin | 16. Function | |