

Washing Machine Instructions



1. Drain
2. Centrifuge
3. Extra Rinse
4. 30 degrees
5. 30 degrees
6. Synthetic cold
7. Fast Wash