


# Washing Machine Instructions

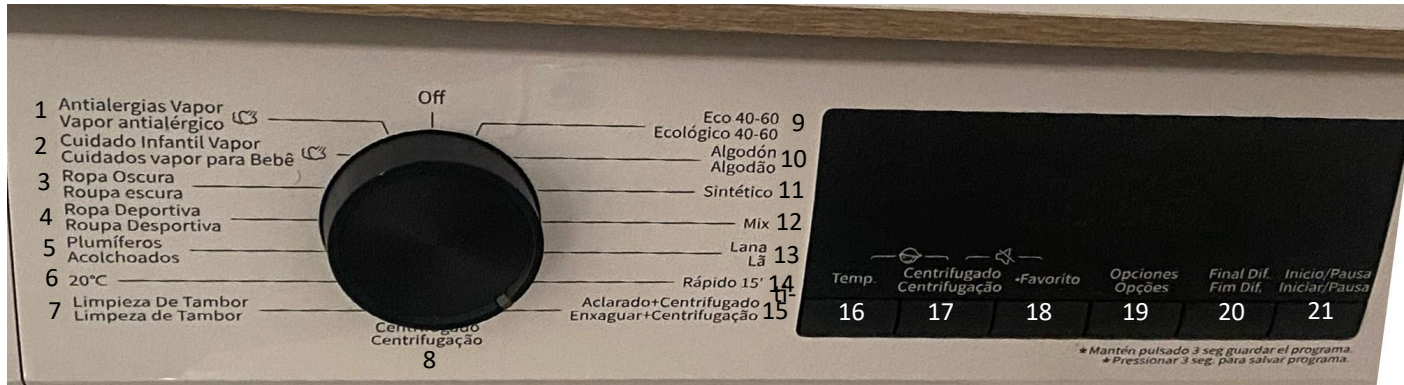

1. Anti-allergy steam
2. Steam child care
3. Dark Clothes
4. Sportswear
5. Duvets
6. 20 degrees
7. Drum Cleaning
8. Spin

9. Eco 40-60 degrees
10. Cotton
11. Synthetic
12. Mix
13. Wool
14. 15 mins rapid wash
15. Spin Rinse

16. Temperature
17. Spin
18. Favorite
19. Options
20. Final Dif
21. Start / Pause

\* Mantén pulsado 3 seg guardar el programa.  
 \* Pressionar 3 seg. para salvar programa.